

Streamline your lighting control installation with Visual Installer!



Visual Installer



Access project floor plans and drawings



Scan control device ID stickers instead of peeling stickers



Attach text and picture notes to the floor plan



Track live installation status



Collaborate in real time, without exporting, emailing, or handing off paper documents

For more information:



Visual Installer Webpage

Explore key features, watch our app demo videos, and more!



Visual Installer Product Webpage

Download the user guide and other product documents!



Visual™ Installer



Go mobile with your installations!

One Lithonia Way, Conyers, GA 30012
Phone: 800.705.7378 | www.acuitybrands.com
©2024 Acuity Brands Lighting, Inc.
All Rights Reserved. | AB_1629100.15


AcuityBrands.

1. DOWNLOAD THE APP



2. IMPORT A PROJECT

Add a project by scanning your title block's QR code or your submittal cover page.

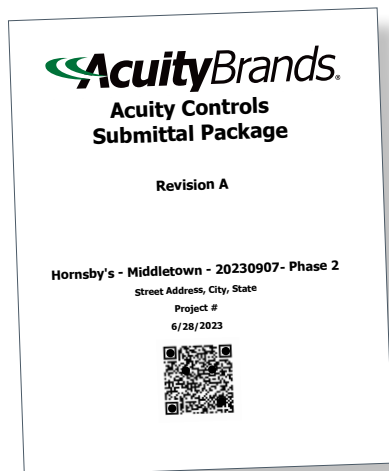

3. ASSIGN DEVICES

Assign a unique ID to a device by scanning its ID sticker.


Example ID Sticker:



nLight® Wired devices have an 8-digit ID
nLight Wireless (AIR) devices have a 4-digit ID

4. ADD NOTES

Select a device or room to leave a text or picture note.

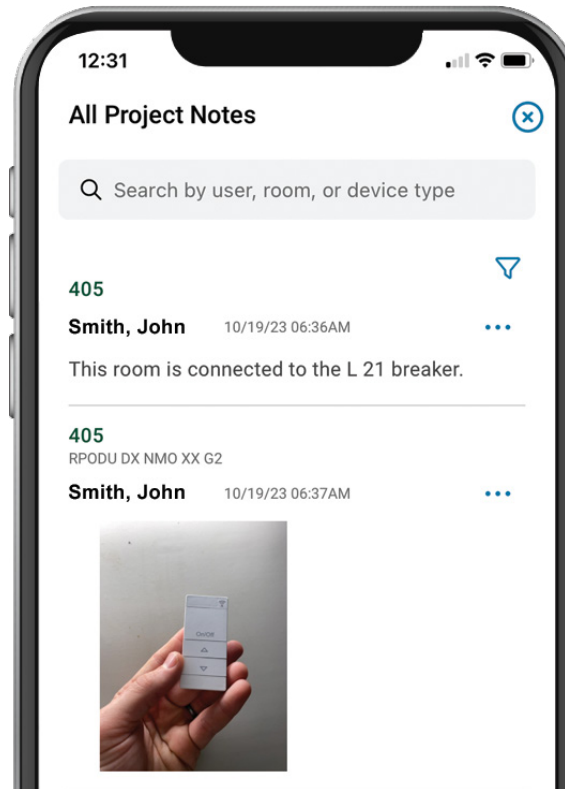

5. PAIRING AND PROGRAMMING

Rooms with nLight AIR devices can be paired together and programmed once all devices have been assigned.

- Press Program
- Select a template
- Follow the on-screen directions (wake devices, walk closer to a device, etc.)
- Programming will complete, and helpful notes will be added to any product location if programming is not successful
- Wireless devices can be tested once programming completes

Room programmed successfully.



Wired devices do not require pairing and should be functional once connected and powered.